


# INSTRUCTIONS

Apply to F180AT/F102AT/F109AT/F360BT  
Note Kee

## • Product introduction

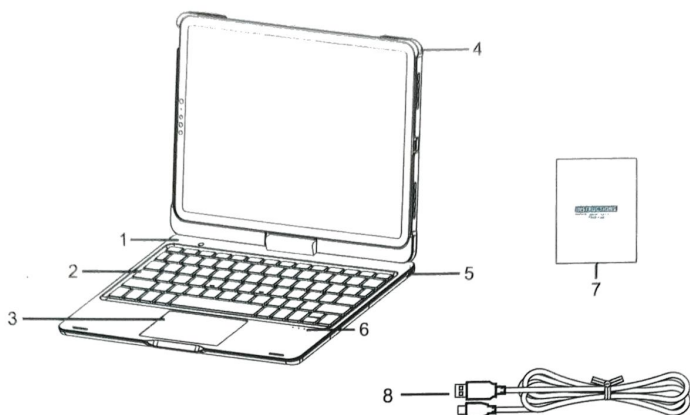

- |                     |                                |
|---------------------|--------------------------------|
| 1. keyboard body    | 5. Charging keyboard interface |
| 2. keyboard         | 6. Wireless indicator          |
| 3. Touch edition    | 7. Manual                      |
| 4. Protective cover | 8. Type-c usb charging cable   |

## • Load and unload the ipad

Classic: F180AT | F102AT | F360BT

Load ipad




1  
Put your iPad on the groove exactly



2  
Press your iPad, let stuck in groove on the keyboard cover

Unload the ipad

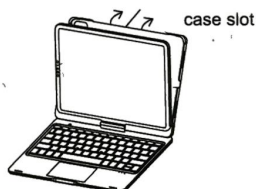


To unload the iPad by breaking out protective shell with your hands

Upgrade version: F109AT

Load ipad




1  
Turn the knobs on the bottom side of the iPad cover, Aim the iPad at the top cover groove and stick it in.

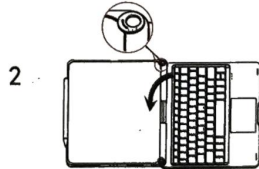

2  
And then you stick the bottom of the iPad in the groove, Turn the screw to hold the iPad in place.

Unload the ipad

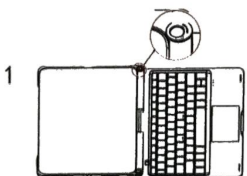



1  
Turn the knobs on the bottom side of the iPad cover.




2  
By pulling the iPad out with both hands, you can remove iPad.

## • Wireless connection

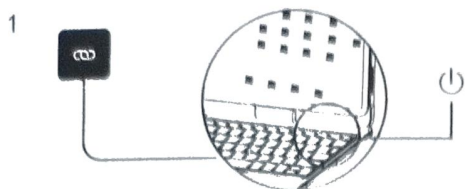

Power on keyboard, press  keys, the keyboard will stay on searching state within 3 minutes.

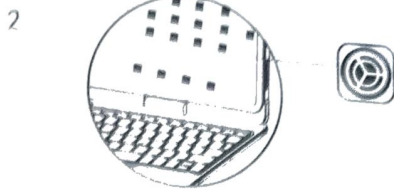


Tap your iPad's settings



Let your iPad Keep Wireless on

4



On other devices in the settings menu choose "iPad keyboard", wireless signal light go out, connection is successful.

Note : Bluetooth will automatically be connected when using next time.

## • Product parameter

1. Operating distance : 10 meters
2. Working voltage 3.3-4.2 V
3. Charging Current: 250 mA
4. Standby Time: 60 days
5. Continuous working time: <5 H(with backlight)  
No backlight version 80 H
6. Charging Time: <3 hours
7. Lithium battery capacity : Backlight version 500mAh
8. Key life: >5 million strokes
9. Operating temperature : 0~55°C

## • Product Features

1. Folio Smart 360 Rotate stand 7 Color Backlit Keyboard Case , which makes viewing more convenient and more versatile
2. Flip Wireless keyboard with protective cover
3. Fantastic, colorful breathing light and backlight. (Only breathing lamp version)
4. Slim, comfortable keyboard

# • Keyboard function introduction




- |  |                  |
|--|------------------|
| 1.  Home (Displays the iPad home screen)       | 10.  Volume down |
| 2.  Darker                                     | 11.  Volume up   |
| 3.  Brighter                                   | 12.  Lock screen |
| 4.  Virtual keyboard                           | 13. Bluetooth    |
| 5.  Search (Launches the iPad search function) | 14. Closed/open  |
| 6.  Back                                       | 15. Delete       |
| 7.  Play/pause                                 | 16. Tab          |
| 8.  Forward                                    | 17. Caps Lock    |
| 9.  Mute                                       |                  |

## Special key instructions

- To alternate the language input methods by pressing **Fn** + .
- Fn** + Turn on/off or adjust the backlit. Operating Method: Press once to turn on the backlit. Press again will increase the brightness. The third time will maximize the brightness. And the fourth time will turn off the backlit. (Only backlight version)
- Fn** + To alternate the 7 backlit color (red, yellow, blue, green, cyan, purple, white) (Only backlight version)
- To type the character in grey area, hold shift and press the desired character.
- + other keys can realise some uncommon special characters
- Some special short characters  
 Cut +      Paste +      Select all +      Copy +
- Breathing lamp mode: There are 2 key combinations. + control breathing lamp switch  
 + controls the speed of the breathing lamp. (Only breathing lamp version)

# ⊙ Charging instructions & maintenance

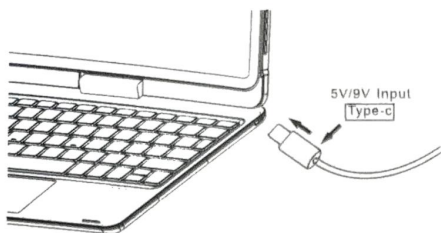

## Indicators Instructions

- ① Blue LED: Blink at pairing; Stays on after paired successfully
- ② White LED: Caps lock indicator
- ③ Red/Green LED: Blink at low-battery, the red light turns on when charging; green light when fully charged


Maintenance: keep at normal temperature and charge at normal voltage. If you don't use it for long time, you need to charge your keyboard in time (once of two months)

★ To check power status, press the key and hold 1 second

Red LED flickers once: >25% power left

Red LED flickers twice: >50% power left

Red LED flickers 3 times: >75% power left

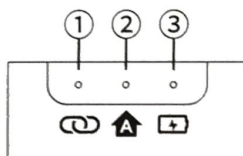

## • Keyboard battery disposal

- Insert screwdriver between plastic top and metal case at keyboard top or bottom
- Pry up plastic top and remove it completely. This action destroys keyboard
- Turn top over and remove tape from battery.
- Separate battery from circuit board
- Dispose of battery according to local laws. Recycle remaining keyboard parts.

Table of Toxic and Hazardous Substance / Elements and Their Content

Ingredients	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
Cable	X	○	○	○	○	○
PWAs	X	○	○	○	○	○
Plastic parts	○	○	○	○	○	○
Membrane	○	○	○	○	○	○
Meter parts	X	○	○	○	○	○
Rubber dome	○	○	○	○	○	○

○ stands for this toxic and hazardous content in homogeneous material is under the SJ/T11363-2006 Standards limits

X stands for this toxic and hazardous content in homogeneous material is beyond the SJ/T11363-2006 Standards limits

Under the ingredients with 'X' in the form all are up to ROHS;

\*on 27 January 2003 the European parliament and the council announce electronic equipment in limiting the use of certain hazardous substances directive 2002/95/EC\*

Note: the environmental protection using period reference standard depends on the product of the regular work temperature and humidity conditions.

\* We won't note you if changing the content of the instructions and specifications.

⚠ Caution: To use this product property, please read the instructions

MADE IN CHINA